

AYA NEO



Boot/Sleep/Wake 1

- In the shutdown state, press and hold the switch button for 2 seconds to turn on AYANEO.
- When the device is turned on, click the power button to put it into sleep mode or wake it up.
- Press for 8 seconds to force a shutdown.

Volume+/Volume- 2 3


- When the machine is turned on, tap Volume + to increase the volume step by step, long press to continuously increase the volume. Tap Volume - to decrease the volume.

Audio Interface 4

- 3.5 mm headphone jack.

TYPE-C Interface 5

- USB 3.2
- This interface only supports USB data transfer.

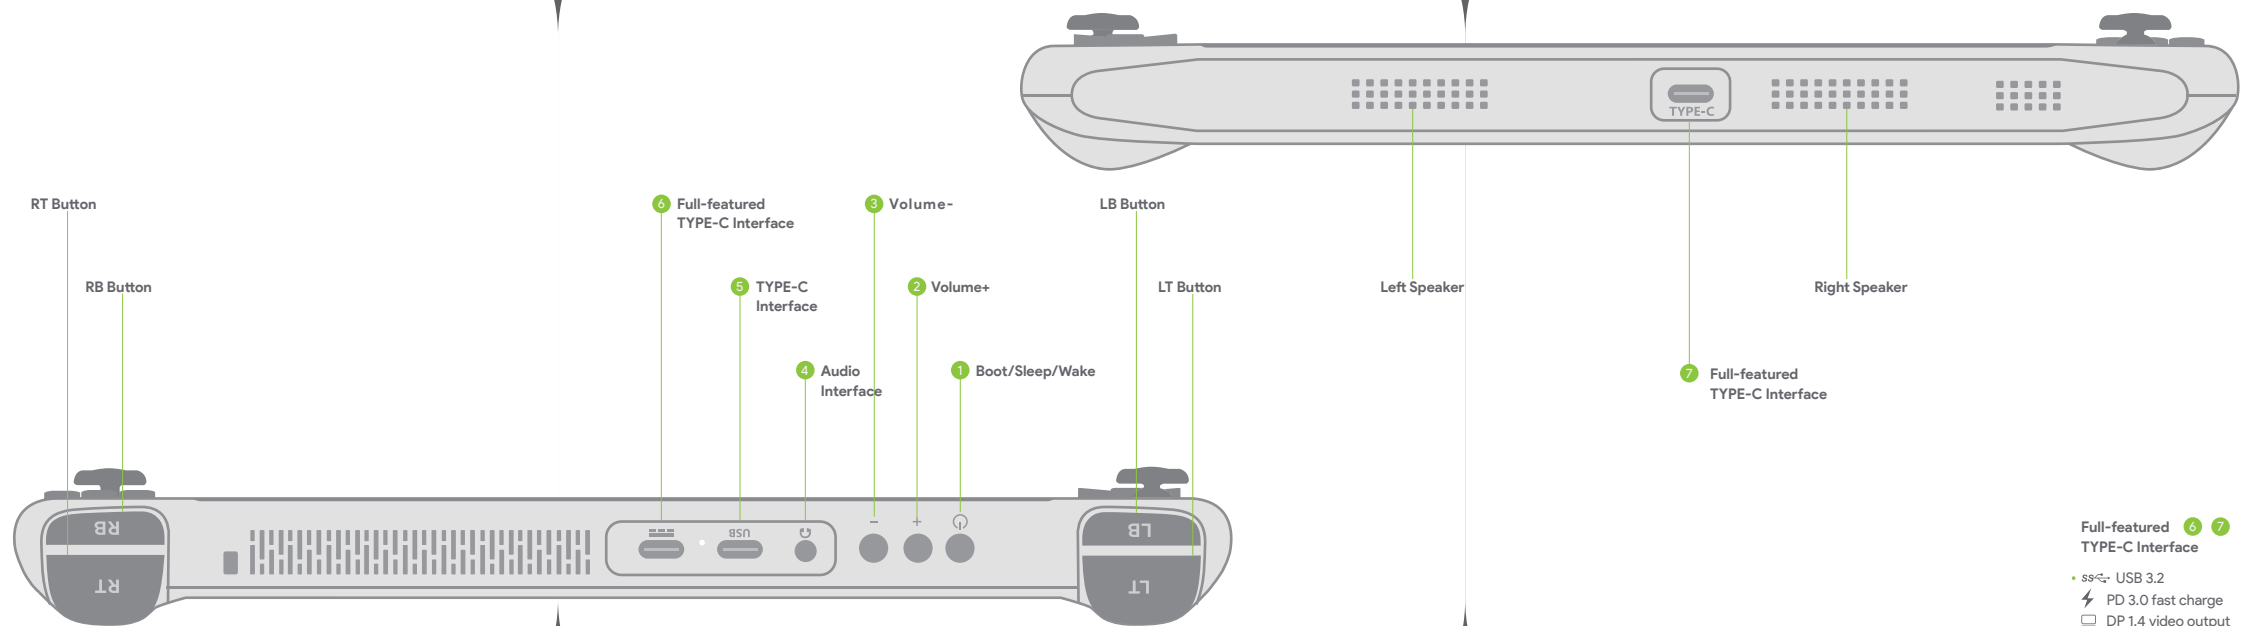

Full-featured TYPE-C Interface 6 7

- USB 3.2
- PD 3.0 fast charge
- DP 1.4 video output

authorized service provider. The available service options depend on the country or region where the requested service is located, and may be restricted to the original country and region of sale. Depending on your location, you may have to pay for phone calls and international shipping costs.

When you submit a valid claim according to the warranty service policy, AYANEO will repair, replace or refund your AYANEO as appropriate. Your warranty rights are in addition to the powers provided by local consumer laws. When you make a claim under this warranty policy, you may need to provide details of the proof of purchase.

Support

www.ayaneo.com.

For support and troubleshooting information, driver software, and the latest AYA Space downloads, please visit www.ayaneo.com.

FCC compliance

This device complies with the specifications in Part 15 of the FCC Rules. The operating device must meet the following two conditions: (1) This device will not cause harmful interference; (2) This device can withstand any external interference, including interference that may cause unintended operation.

EU compliance

AYANEO hereby declares that this wireless device complies with the directive 2014/53/EU.

AYA NEO

AYA NEO

Read the manual at <https://www.ayaneo.com/manual> before using AYANEO .
You can also read the paper manual that comes with the package.

Boot and shut down

Press the power button for 2 seconds to start AYANEO . During the boot process, the indicator light between the two Type-C at the top is always on. The fan will work at the maximum speed. After the self-check, it will return to normal speed and the indicator light will go out. Press and hold the power button for two seconds in the power-on state, and a pull-down shutdown menu will pop up at the top of the screen. Press and hold the power button, touch and slide down (slide to turn off the computer) to complete the AYANEO shutdown operation. Or click on the lower left corner of the screen: Window button> Power> Shut down to turn off AYANEO. Press and hold the power button for 8 seconds in the power-on state to forcibly shut down AYANEO. It is not recommended to force this operation in normal use scenarios.

Sleep and Wake

Click the power button in the power-on state to quickly enter the sleep state, or click the lower left corner of the screen: Window button>Power>Sleep to put AYANEO in sleep state. In sleep mode, the indicator light between the two Type-C at the top is in a regular breathing state, and the cooling fan will stop rotating. Click the power button in sleep state to wake up AYANEO , the indicator light between the two Type-C at the top is off, and the cooling fan rotates normally. To wake up under different interfaces, you need to wait for 1-3 seconds for the screen to turn on and wake up.

Battery and Charging

Do not try to replace the AYANEO battery by yourself, you may damage the battery, resulting in overheating, fire and personal injury. The lithium-ion battery of AYANEO should be operated or recycled under the instructions provided by AYANEO. It must be recycled separately from household waste. Please dispose of the battery in accordance with local environmental regulations. The battery can only be replaced by AYANEO or AYANEO authorized service provider. Replacement with the wrong type of battery may cause an explosion. When Type-C is plugged into the power supply, avoid prolonged contact between the skin and the plug, otherwise it may cause discomfort or injury. Please use the included adapter to charge AYANEO . Do not use an adapter without safety certification to charge AYANEO. It may cause damage to internal components and unpredictable danger.

Cleaning

Please use a lint-free cloth to clean AYANEO . Do not let any opening get damp or use aerosol sprays, solvents or abrasives.

Medical equipment interference

Some components inside AYANEO include magnets and radio emission electromagnetic fields. These electromagnetic fields may interfere with medical equipment, pacemakers, defibrillators, or other medical equipment. Please keep a safe distance between the medical equipment and AYANEO . Please consult your physician and medical device manufacturer for medical device information. If you suspect that AYANEO interferes with your pacemaker, defibrillator or other medical equipment, please stop using AYANEO .

AYANEO guarantees that all hardware products and accessories will be within one year from the date of the original retail purchase. AYANEO does not guarantee normal wear and tear, nor does it guarantee damage caused by accidents or abuse. To obtain services, please visit AYANEO mall or AYA



4Y4 N20